



G&G Xtreme45 airsoft Disassembly

This guide will show how to disassemble the airsoft Xtreme45 and allow you access all major parts groupings.

Written By: 101 Tech USA



INTRODUCTION

This guide will show how to disassemble the Xtreme45 and all allow you access all major parts groupings. If you wish to just disassemble a particular part or section you may want to skip particular steps.



TOOLS:

- [1.5mm Hex Screwdriver](#) (1)
 - [Large Needle Nose Pliers](#) (1)
 - [Soft Mallet](#) (1)
 - [Thin Punch](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — G&G xtreme45



- Begin disassemble by removing the small Philips screws on either side of slide.
- Next remove the 1.5mm Hex screw just above the right side Philips.

Step 2



- Now pole the hammer back.
- Now take the back piece shown out of the rear of slide.

Step 3




- Now prepare to remove the slide.
- First loosen the sight screw so the rear sight does not get caught on anything.
- Next make sure the Hop Up adjustment screw is not high enough stop the slide from coming off or you can remove it altogether.
- Now you can push the slide forward and off the receiver.

Step 4



- With the slide removed you can just simple take the spring, and spring guide off.


Step 5

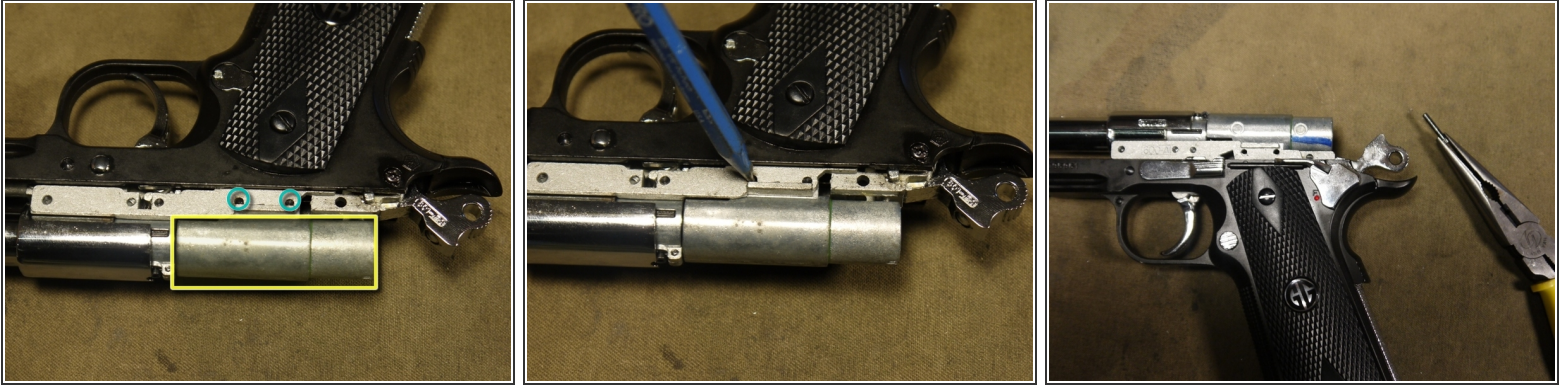

- Now to remove the valve body.
- Start by pushing out the pins shown with a punch.
- When the pins are part of the way out you can grab them with pliers.


⚠ Make sure to remove the pins correct direction. If the part of the pin that is sticking is textured then you are doing it correct. Otherwise start punching the pins the other direction.

Step 6

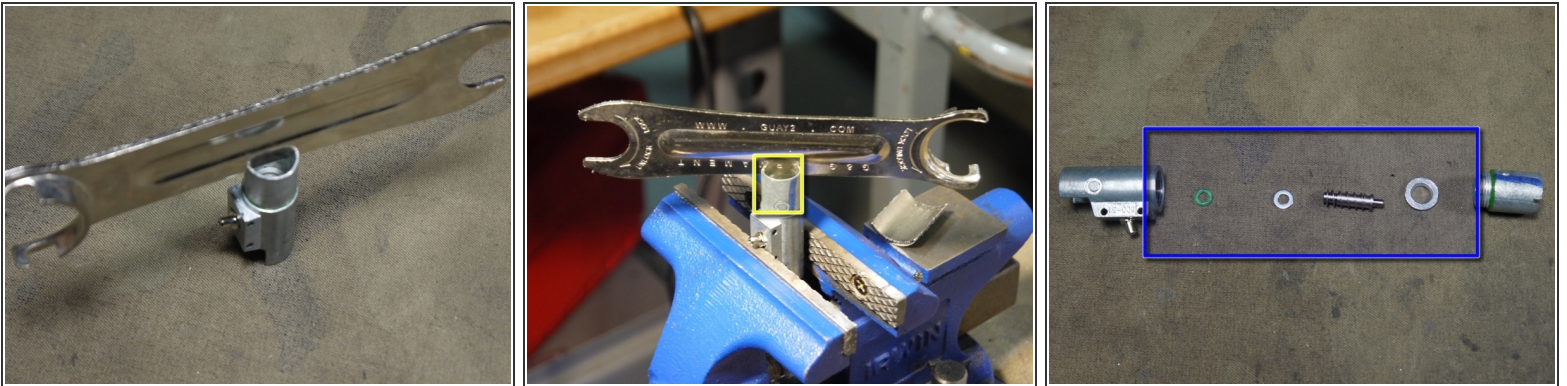



- With the pins removed the valve body can be simple poled out.
- If you wish to break it down farther you can unscrew the section shown.
- This can be done taking a long flat piece of metal and use it like a flat head screw driver. The best way to hold the other half is with a vice. try to avoid using anything that will leave a mark or bends the metal.
- Once the cap piece has been removed the following piece can be found inside.

Step 7

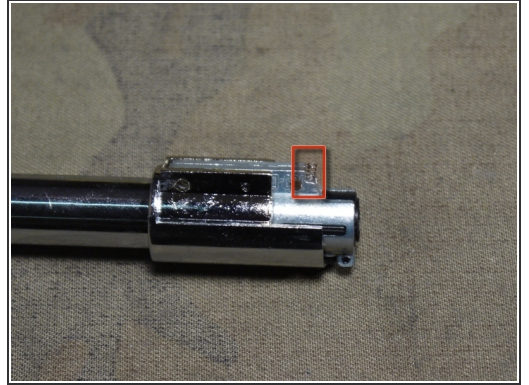


- To remove the barrel start by remove the following pins.
- Then simple lift the barrel up and out of body.
- Be careful not to lose the spring shown.

Step 8

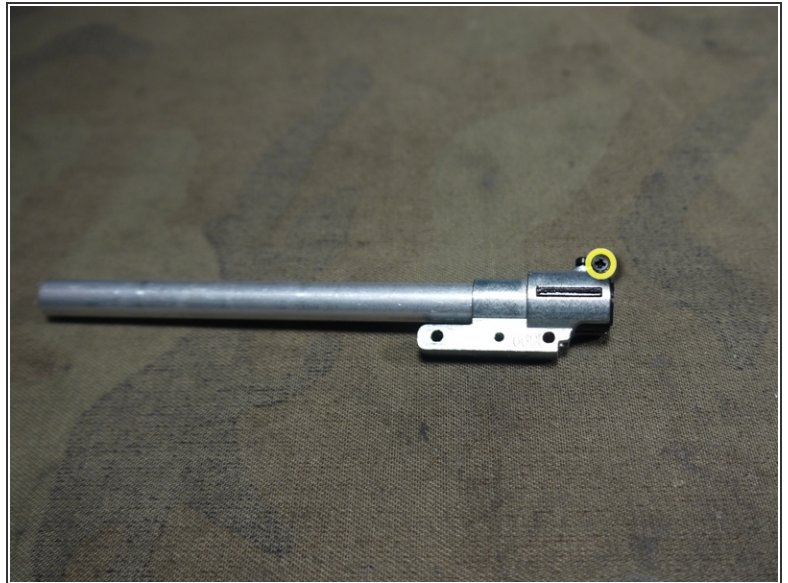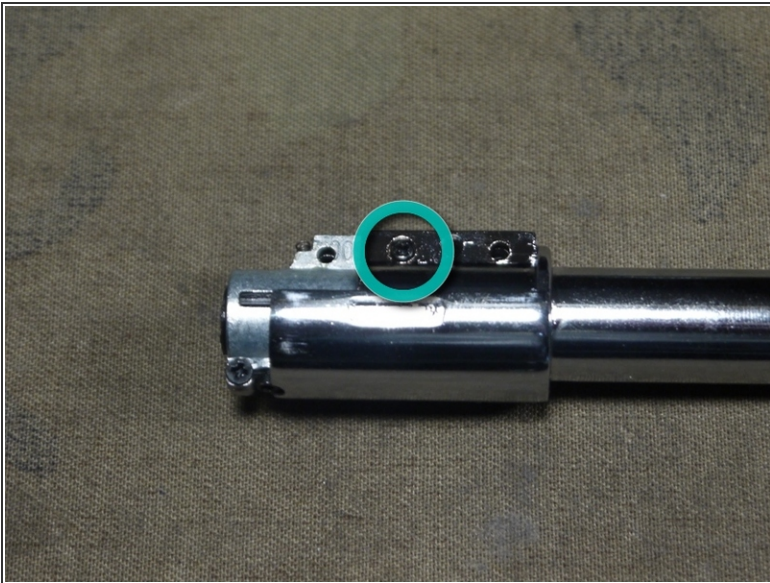

- To remove the hop-up and inner barrel from the outer barrel first remove the Philips screw shown.
- Once that screw is removed you can slide the hop-up and inner barrel out.
- The hop-up unit is a clam shell design so by removing the screw at the top the hop up splits into to and grants you access to the bucking and barrel.

Step 9

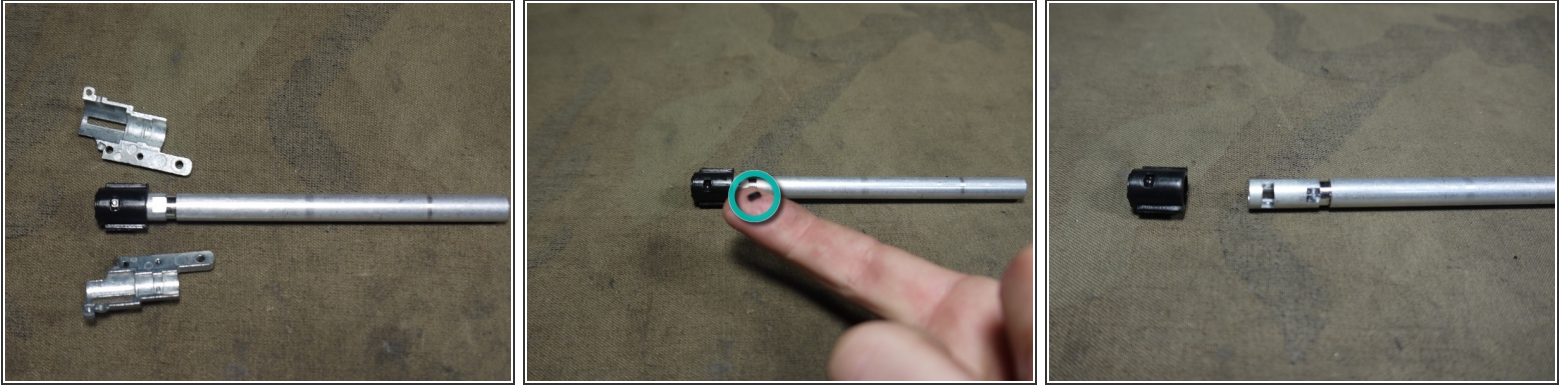

- You can split the hop-up halves.
- Make sure when you do not to lose the small hop-up nub that fits into a hole in the bucking.
- You can now remove the bucking from the barrel.

Step 10



- To remove the trigger grouping first push out the magazine catch with a punch.
- Then remove the Philips screw at the back.
- Now pole out the safety leaver once the screw is removed.

Step 11



- Now the trigger grouping can be removed from the body and your disassemble is complete.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-27 05:30:25 PM.